



A5 Series | String / Festoon ZOZO Lamps & Gasket Information

1170 N Red Gum St, Anaheim, CA 92806

aluz.lighting | info@aluz.lighting | 866.ALUZ.LTG | 714.535.7900

© ALUZ All Rights Reserved.
ALUZ reserves the right to make changes or withdraw specifications without prior notice.

WARNING

When using ZOZO for any application, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and personal injuries. Lighting must be installed in accordance with the NEC or CEC as applicable. ALUZ will not be responsible for any damage or malfunction to lamps or string lights caused by the following:


- A lamp gasket (**A5-ZOZO-GS**) must be used on each lamp for outdoor or wet location applications.
- Do not overtighten lamps. Overtightening lamps will compromise weatherproof seal or cause damage to internal components.
- Do not install lamps while light string is energized.
- Do not mount string lights in locations where lamps or sockets will be subjected to pooling water. (**Fig. 1**)
- Do not submerge lamps or sockets in any liquid.
- Do not penetrate lamps with any object. (**Fig. 2**)
- Do not operate lamps in a location where they may come into contact with flammable materials. (**Fig. 3**)
- Do not cover lamps or sockets with any material. (**Fig. 3**)
- Do not apply excessive pressure to lamps. (**Fig. 4**)

Refer to Product Care on installation instructions for additional details.

STEP BY STEP INSTRUCTIONS


- 1 Place the lamp gasket onto the lamp threads. The bottom edge of the lamp gasket should sit just above the lamp threads where they meet the bulb, leaving a small gap.

Note: Do not place the gasket over the bulb.

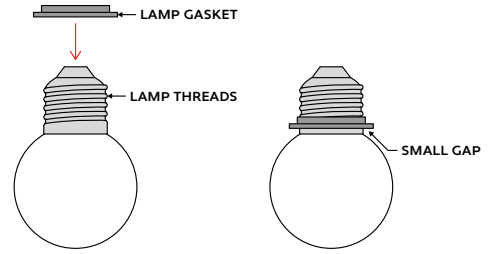

- 2 Screw lamp into socket. The wide edge of the gasket should sit flush with the rim of the socket, making continuous contact around the diameter.

Note: Do not overtighten lamps in socket. Turn lamp gently until there is a slight resistance.

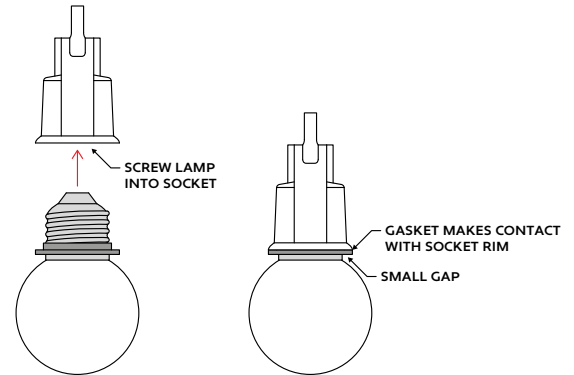

FIGURES

Fig. 1

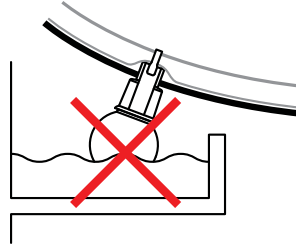


Fig. 2

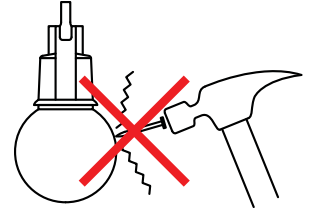


Fig. 3


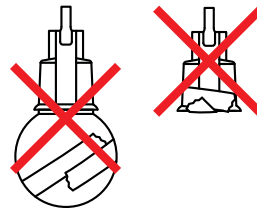


Fig. 4

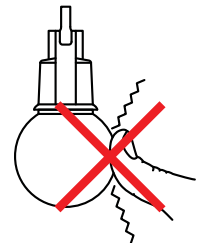

TROUBLESHOOTING TIPS

Causes for Lamp Failure

- Overtightened lamps.
- Damaged electrical contacts inside socket.
- Missing lamp gaskets.
- Gaskets not installed correctly.
- Liquid inside sockets.
- No GFCI or surge protection.