



# ALUZ

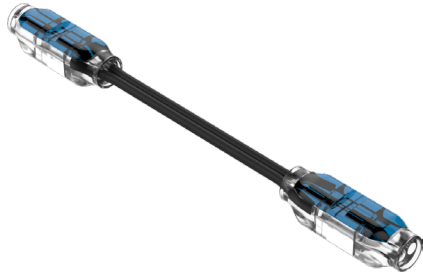


Wet Continuous Connector  
20/2 Gauge Wire  
(A1-CC-2P-WET-X)  
X = Specify Length, 36" Default


- 1 Slide shrink tube over wires and connector.  
Part wires 3/4" for insertion into the wet splice connector.

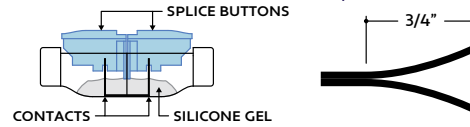

- 2 Push wires into connector until they stop at the center point.  
Repeat process for the other side.  
**Note:** The positive wire (+) has a ribbed wire jacket, the negative wire (-) has a smooth wire jacket.

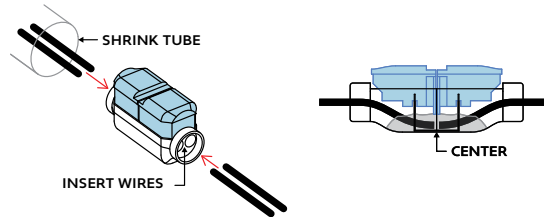


- 3 Use pliers to push splice buttons down completely until they sever the wire and snap into place.

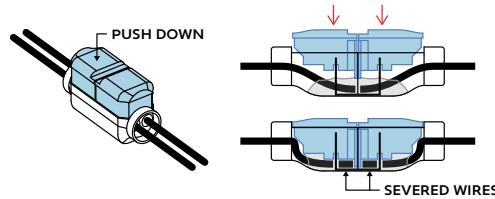

## A1 Series | Surface CONNECTOR Wet Continuous Connector (A1-CC-2P-WET)

- 4 Slide shrink tube over connector and apply heat. The shrink tube will shrink down around the connector. Apply silicone around the ends to create a stronger seal.  
**Note:** Do not use an open flame such as a lighter or torch to heat shrink tube.

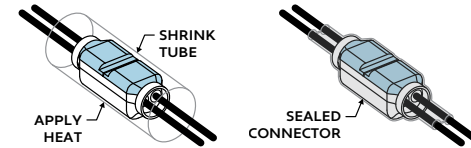

- 5 Slide shrink tube over wires and connector.  
Part wires 3/4" for insertion into the wet splice connector.

