



GENERAL FEATURES

Applications	Indirect and Direct Lighting
Lens	Clear, 50% Semi-Frosted, or 100% Frosted
Optics & Asymmetric	15°, 30°, 45°, 60° or Asymmetric Optics
Length	Built to Order (+/- 1.8" Tolerance) See Length Restrictions Table for details
Construction	Aluminum Extrusion
Weight	0.95 lbs per foot
Mounting	Mounting Clips (Sold Separately)
Listing	Dry or Damp Location UL1598, CSA C22.2#250.0 UL8750, CSA250 UL2108, 67.1.9, 60.4, CSA C22.2 #9
Temperature Ratings	Operating / Startup: -20° to 48°C (-4° to 120°F) Storage: -40° to 76°C (-40° to 170°F)
Installation Link	

END VIEWS / DIMENSIONS

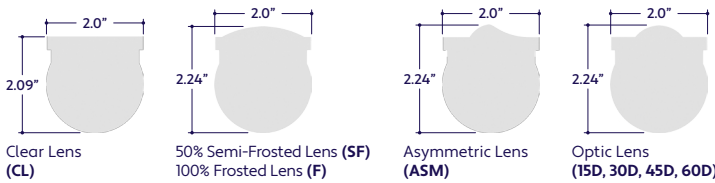

LENS / OPTICS APPEARANCE

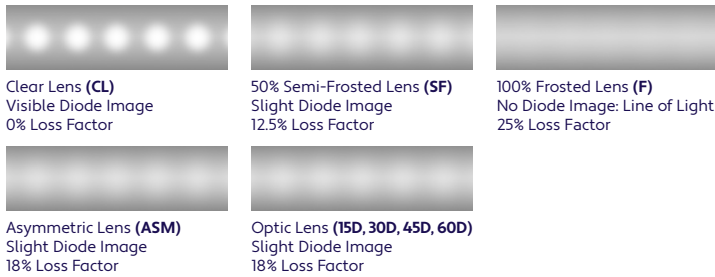

ELECTRICAL

Dimming	0-10V, DMX, DALI
Luminaire Voltage	120V - 277V (UNV)

MINIMUM & MAXIMUM RUNS

Wattage	1.5W	2W	3W	4W	5W	6W	8W	10W	12W
0-10V & DALI Minimum Run	4'	3'	2'	2'	2'	1'	1'	1'	1'
0-10V & DALI Maximum Run	39'	27'	19'	14'	11'	9'	7'	6'	5'
DMX Minimum Run	4'	3'	2'	2'	2'	1'	1'	1'	1'
DMX Maximum Run	26'	18'	13'	9'	8'	6'	4'	4'	3'

SPECIFY PRODUCT CODE | CHOOSE FROM DROP DOWNS


Series	Lens / Optics	Finish	BIOS LED	Watts per Foot	Dimming	Feed Point	Listing	Luminaire Voltage ⁹	Luminaire Length
A1-ZAFU-PVT-BIOS									
ZAFU Pivot BIOS Illuminated (A1-ZAFU-PVT-BIOS)	Clear Lens (CL)	Natural Silver* ² (NA)	BIOS Biological Static: 3500K Daytime* ³ (BS-35K)	1.5 Watts (1.5W) 232 Lumens / ft* ⁶	0-10V (10V)	End Feed* ⁷ (EF)	Indoor (DRY)	120 - 277V Line Voltage (UNV)	Specify Length in Feet & Inches Example: 7'8"
	50% Semi-Frosted Lens (SF)	White (WH)		2 Watts (2W) 310 Lumens / ft* ⁶		Bottom Feed (BF)			
	100% Frosted Lens (F)	Satin (SA)	BIOS Biological Dynamic: 3500K Daytime - 3000K Evening* ⁴ (BD-35K-30K)	3 Watts (3W) 465 Lumens / ft* ⁶	DALI (DALI)	Side Feed Left (SFL)	Outdoor (DAMP)		
	Asymmetric Lens Left (ASML)	Black (BK)		4 Watts (4W) 620 Lumens / ft* ⁶		Side Feed Right* ⁸ (SFR)			
	Asymmetric Lens Right* ¹ (ASMR)	Silver (SR)		5 Watts (5W) 775 Lumens / ft* ⁶	DMX-512 (DMX)				
	15° Optics (15D)			6 Watts (6W) 930 Lumens / ft* ⁶					
	30° Optics (30D)			8 Watts (8W) 1240 Lumens / ft* ⁶					
	45° Optics (45D)			10 Watts (10W) 1550 Lumens / ft* ⁶					
	60° Optics (60D)			12 Watts (12W) 1860 Lumens / ft* ⁶					

Note: See page 2 for ordering notes & restrictions.


ORDERING NOTES & RESTRICTIONS

- *¹ Default Asymmetric Direction is Right (**ASMR**) if left blank.
- *² Default finish is Natural Silver (**NA**) if left blank.
- *³ BIOS Biological Static available in standard 3500K Daytime CCT. Consult factory for other color temperature options.
- *⁴ BIOS Biological Dynamic available in standard 3500K Daytime - 3000K Evening CCT gamut. Consult factory for other color temperature options.
- *⁵ BIOS Biological Tunable available in standard 3500K Daytime - 2700K Evening CCT gamut. Consult factory for other color temperature options.
- *⁶ Lumens per Foot based on 35K CCT LED. **Example:** 155 Lumens x 10 Watts = 1550 Initial Lumens per Foot.
- *⁷ Default feed point is End Feed (**EF**) if left blank.
- *⁸ Default Side Feed direction is Right (**SFR**) if unspecified.
- *⁹ Integral Drivers are sized based on wattage per length. **Example:** 10' x 3 Watts per Foot = 30 Watts. Driver will be sized based on 30 Watts.

BEAM ANGLES

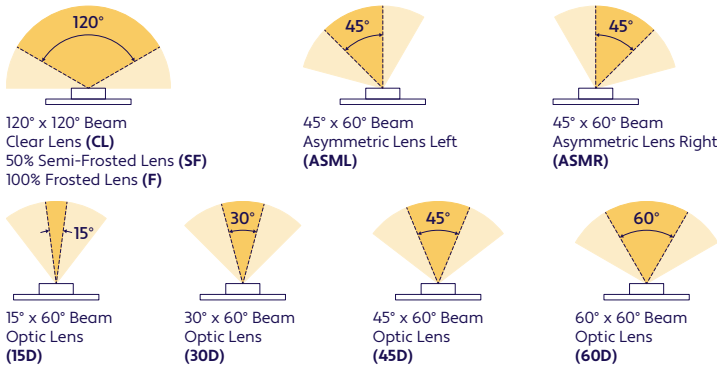

OPTICS ORIENTATION

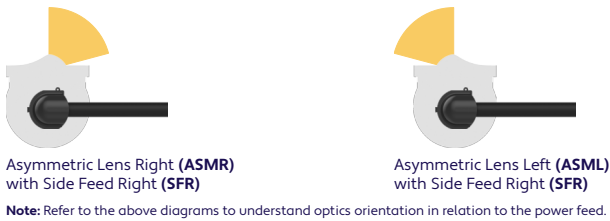

FEED POINTS

Dry Location Feed Points



- Note:** Account for the cordgrip dimensions when measuring.
- Add 0.15" for (EF), (BFF), (SFLL), and (SFFR).
 - Add 0.55" for (BF), (SFL), and (SFR).


Wet Location Feed Points



- Note:** Account for the cordgrip dimensions when measuring.
- Add 0.80" for (EF), (BFF), (SFLL), and (SFFR).
 - Add 1.25" for (BF), (SFL), and (SFR).


MOUNTING OPTIONS (Sold Separately)

Note: Mounting clips are only available in Natural Silver Finish, unless otherwise specified.

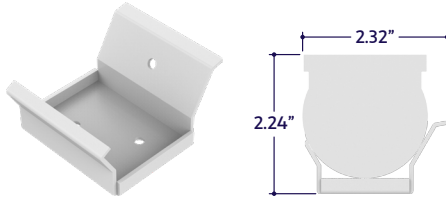


Part #	Qty.
A1-ZAFU-PVT-MC-1	

Note: Use 1 mounting clip per 2', rounded up.
Click on image to see cut sheet for additional details.

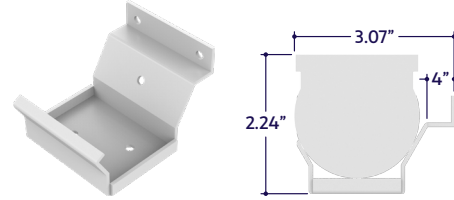


Part #	Qty.
A1-ZAFU-PVT-MC-2	

Note: Use 1 mounting clip per 2', rounded up.
Click on image to see cut sheet for additional details.

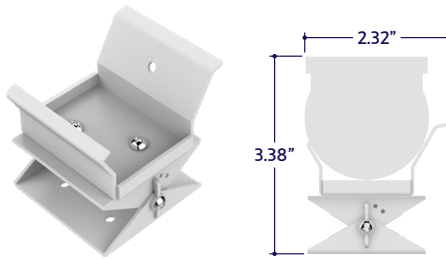

Part #	Qty.
A1-ZAFU-PVT-MC-3	


Note: Use 1 mounting clip per 2', rounded up.
Click on image to see cut sheet for additional details.

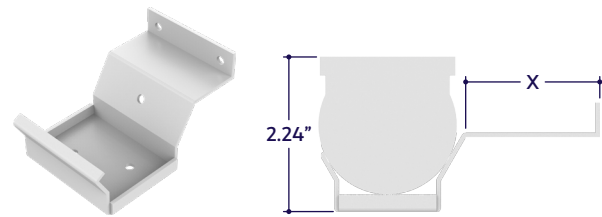

Part #	Length	Qty.
A1-ZAFU-PVT-MC-4		

Note: Use 1 mounting clip per 2', rounded up.
Click on image to see cut sheet for additional details.


CONNECTORS (Sold Separately)

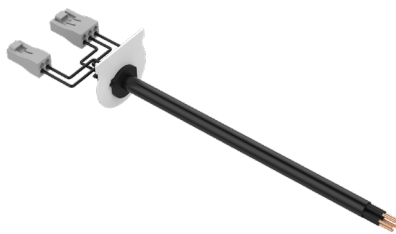

Dry Power Connector with End Cap
(A1-ZAFU-PVT-BIOS-PC-EC-Y-DRY-X)
Y = Lens / Optics
X = Specify Cable Length, 6" Default

Part #	Length	Qty.
A1-ZAFU-PVT-BIOS-PC-EC-CL-DRY-		
A1-ZAFU-PVT-BIOS-PC-EC-SF-DRY-		
A1-ZAFU-PVT-BIOS-PC-EC-F-DRY-		
A1-ZAFU-PVT-BIOS-PC-ECL-ASM-DRY-		
A1-ZAFU-PVT-BIOS-PC-ECR-ASM-DRY-		
A1-ZAFU-PVT-BIOS-PC-EC-15D-DRY-		
A1-ZAFU-PVT-BIOS-PC-EC-30D-DRY-		
A1-ZAFU-PVT-BIOS-PC-EC-45D-DRY-		
A1-ZAFU-PVT-BIOS-PC-EC-60D-DRY-		

Note: Use 1 Dry Power Connector with End Cap for each dry location power lead.

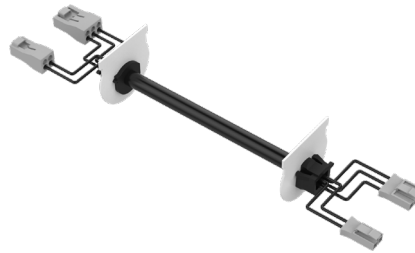

Dry Jumper Cable with End Cap
(A1-ZAFU-PVT-BIOS-JC-EC-Y-DRY-X)
Y = Lens / Optics
X = Specify Cable Length, 6" Default

Part #	Length	Qty.
A1-ZAFU-PVT-BIOS-JC-EC-CL-DRY-		
A1-ZAFU-PVT-BIOS-JC-EC-SF-DRY-		
A1-ZAFU-PVT-BIOS-JC-EC-F-DRY-		
A1-ZAFU-PVT-BIOS-JC-EC-ASM-DRY-		
A1-ZAFU-PVT-BIOS-JC-EC-15D-DRY-		
A1-ZAFU-PVT-BIOS-JC-EC-30D-DRY-		
A1-ZAFU-PVT-BIOS-JC-EC-45D-DRY-		
A1-ZAFU-PVT-BIOS-JC-EC-60D-DRY-		

Note: Use 1 Dry Jumper Cable for each instance where the run will transverse a corner or an obstacle.


DELIVERED MELANOPIC RATIOS

BIOS Solution / Nominal CCT / Product Code	Spectral Mode	CRI	R9	Daytime Spectrum Melanopic Ratio* (M/P)	
				m-EER	m-DER
BIOS Biological Static: 3500K Daytime (BIOS-BS-35K)	Daytime Solution	80+	> 90	≥ 0.80	≥ 0.72
BIOS Biological Dynamic: 3500K Daytime - 3000K Evening (BIOS-BD-35K-30K)	Daytime + Evening Solution	80+	> 90	≥ 0.70	≥ 0.63
BIOS Biological Tunable: 3500K Daytime - 2700K Evening (BIOS-BT-35K-27K)	Daytime + Evening Solution	80+	> 90	≥ 0.80	≥ 0.72

*Melanopic ratios are provided in two forms: (m-EER) which is calculated using the WELL v2 methodology and the corresponding CIE melanopic Daylight Equivalent Ratio, (m-DER).

CHOOSING YOUR BIOS SOLUTION


ALUZ offers four different BIOS Circadian LED Solutions – Biological Static, Biological Dynamic, and Biological Tunable White. Use the decision tree below to identify when and where to use BIOS Wellness LED Lighting Solutions .

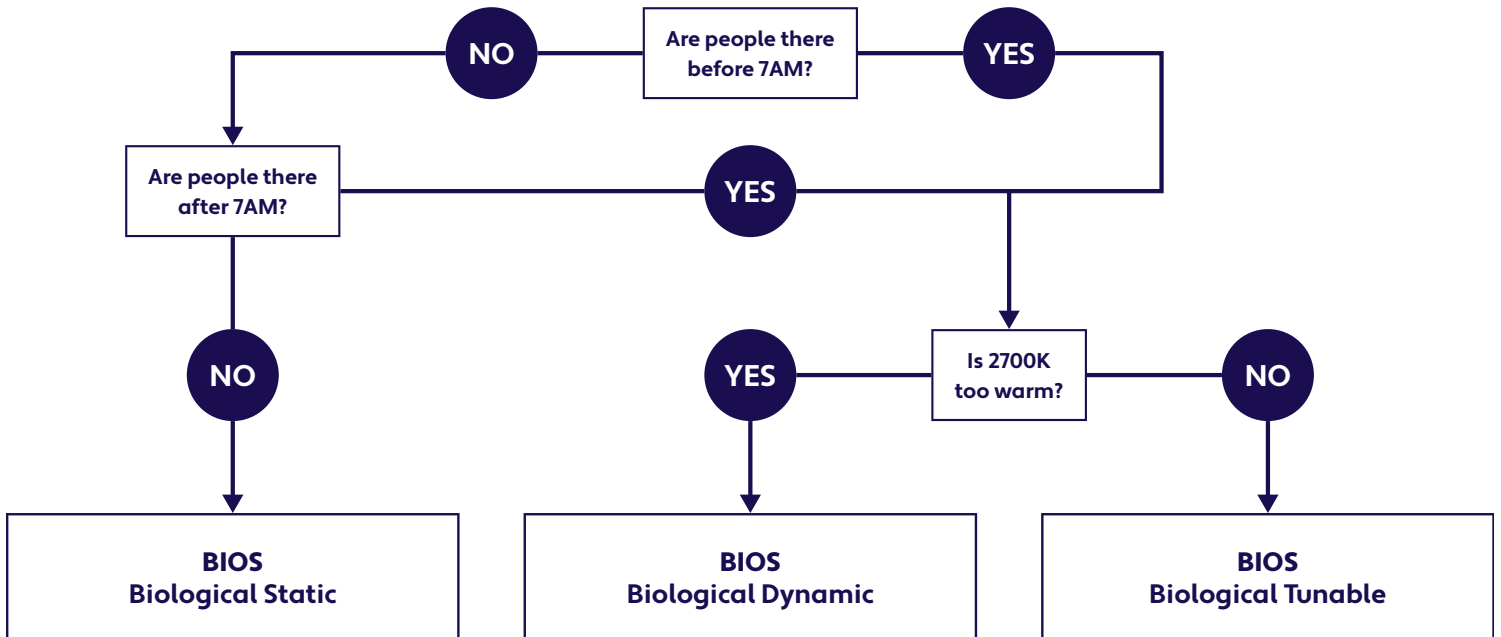

No CCT Change when Dimmed


500K Shift when Dimmed^B

Dims to 2700K

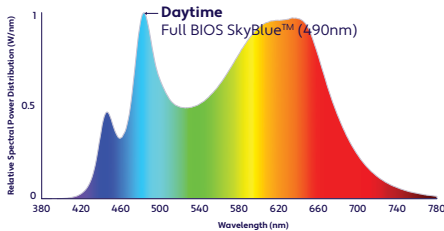


Daytime Solution
(Offices, Medical / Dental Offices)

Spaces in operation during daytime hours, between 7AM and 7PM.

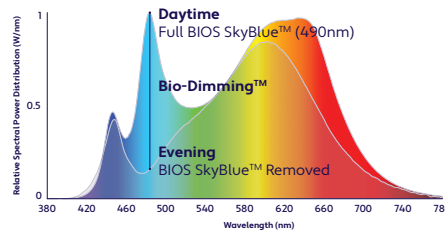

Daytime + Evening Solution
(Hospitals)

Spaces in operation overnight, after 7PM and before 7AM. CCT color shift in the evening not preferred.
(^B3000K dims to 2700K)

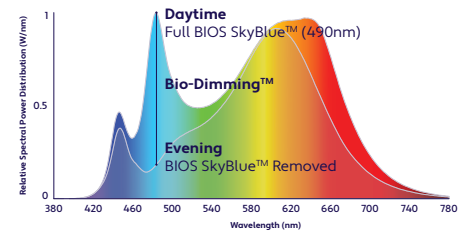


Daytime + Evening Solution
(Offices, Shiftwork)


Spaces in operation overnight, after 7PM and before 7AM and people do not sleep there. CCT color shift in the evening not preferred.

DESIGN GUIDELINES


Individual Fixture

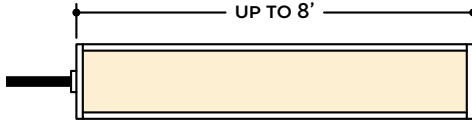

Continuous Run (Dry Location)

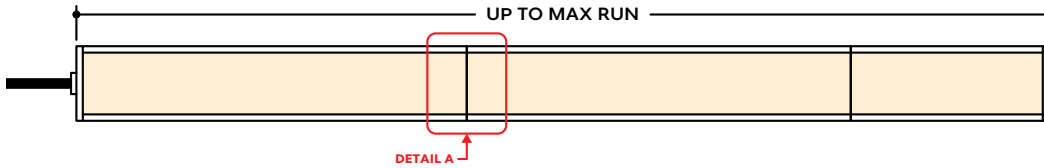

Run with Square Layout (Dry Location)

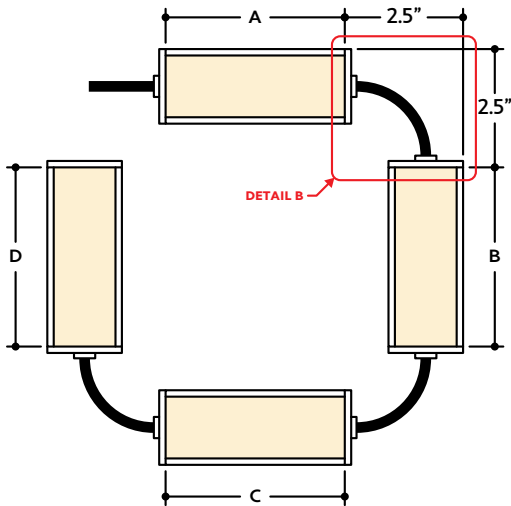

KEY


Detail A **Continuous Connection (Dry Location):** Luminaire segments connect using internal continuous connectors, leaving no gaps between segments, with a mounting clip holding the two segments together. Refer to installation instructions for additional information.

Detail B **Dry Jumper Cable:** Used to span a corner or traverse a gap or obstacle in the installation area.

Note: Drawings not to scale. Product may differ from examples shown.

CONNECTION SEQUENCE

Dry Location

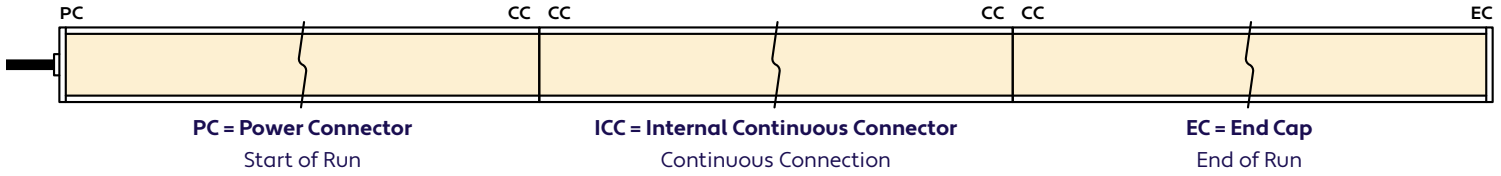


- Specifying a layout is not required to place an order.
- Configuration code applies to full length ordered and will be built per the Continuous Run models on Design Guidelines.
- Connector type subject to change based on availability and listing. Refer to Design Guidelines for details.

HOW TO SPECIFY CONFIGURATIONS


Example: 20' Straight Run

- 1x A1-ZAFU-PVT-BIOS-CL-NA-BS-35K-10W-10V-EF-DRY-UNV-9'-PC-EC




Example: 25' L-Shaped Run

- 1x A1-ZAFU-PVT-BIOS-CL-NA-BS-35K-10W-10V-EF-DRY-UNV-6'-PC-CC
- 1x A1-ZAFU-PVT-BIOS-CL-NA-BS-35K-10W-10V-EF-DRY-UNV-7'-CC-EC

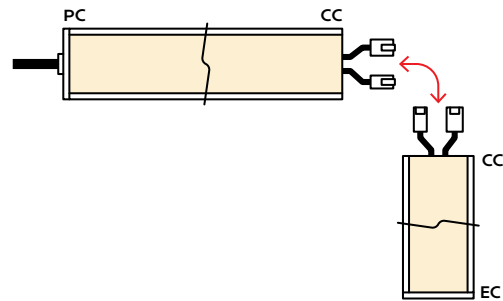

Example: 30' U-Shaped Run

- 1x A1-ZAFU-PVT-BIOS-CL-NA-BS-35K-10W-10V-EF-DRY-UNV-6'-PC-CC
- 1x A1-ZAFU-PVT-BIOS-CL-NA-BS-35K-10W-10V-EF-DRY-UNV-7'-CC-CC
- 1x A1-ZAFU-PVT-BIOS-CL-NA-BS-35K-10W-10V-EF-DRY-UNV-6'-CC-EC

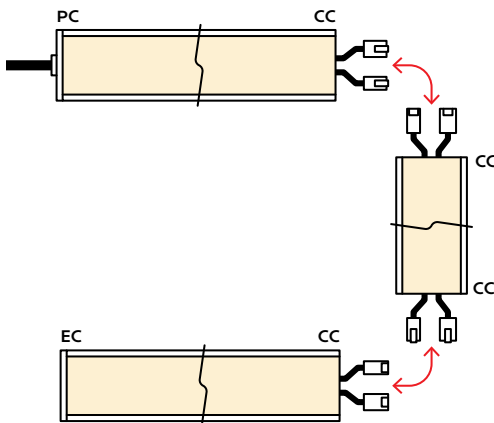

Example: 28' Rectangle Shaped Run

- 1x A1-ZAFU-PVT-BIOS-CL-NA-BS-35K-10W-10V-EF-DRY-UNV-5'-PC-CC
- 1x A1-ZAFU-PVT-BIOS-CL-NA-BS-35K-10W-10V-EF-DRY-UNV-3'-CC-CC
- 1x A1-ZAFU-PVT-BIOS-CL-NA-BS-35K-10W-10V-EF-DRY-UNV-5'-CC-CC
- 1x A1-ZAFU-PVT-BIOS-CL-NA-BS-35K-10W-10V-EF-DRY-UNV-3'-CC-EC

