



END VIEWS / DIMENSIONS

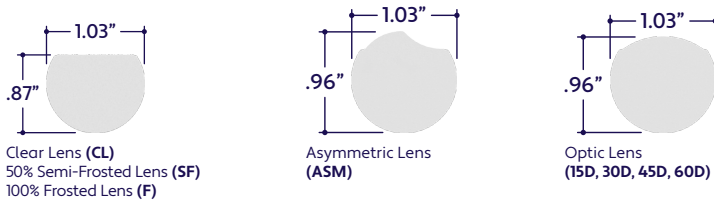

LENS / OPTICS APPEARANCE

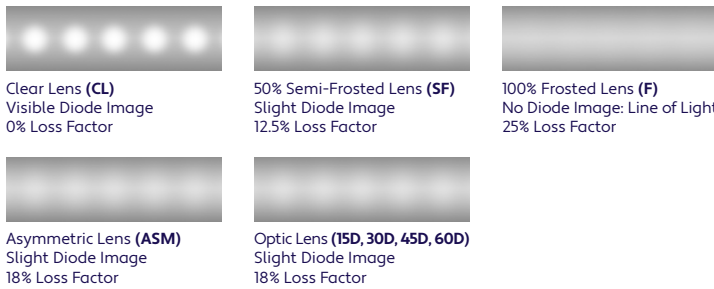

SPECIFY PRODUCT CODE | CHOOSE FROM DROP DOWNS


Series	Lens / Optics	Finish	BIOS LED	Watts per Foot	Dimming	Listing	Luminaire Voltage ⁶	Luminaire Length
							UNV	
ZUCO Pivot BIOS Illuminated (A1-ZUCO-PVT-BIOS)	Clear Lens (CL)	Natural Silver ¹ (NA)	BIOS Biological Static: 3500K Daytime ² (BS-35K)	1.5 Watts (1.5W) 232 Lumens / ft ²	0-10V (10V)	Indoor (DRY)	120 - 277V Line Voltage (UNV)	Specify Length in Feet & Inches Example: 7'8"
	50% Semi-Frosted Lens (SF)	Silver (SR)		2 Watts (2W) 310 Lumens / ft ²				
	100% Frosted Lens (F)	White (WH)		3 Watts (3W) 465 Lumens / ft ²				
	Asymmetric Lens (ASM)	Satin (SA)	BIOS Biological Dynamic: 3500K Daytime - 3000K Evening ³ (BD-35K-30K)	4 Watts (4W) 620 Lumens / ft ²	DALI (DALI)	Outdoor (DAMP)		
		Black (BK)		5 Watts (5W) 775 Lumens / ft ²				
		15° Optics (15D)		6 Watts (6W) 930 Lumens / ft ²				
	30° Optics (30D)	BIOS Biological Tunable: 3500K Daytime - 2700K Evening ⁴ (BT-35K-27K)			8 Watts (8W) 1240 Lumens / ft ²	DMX-512 (DMX)		
	45° Optics (45D)	10 Watts (10W) 1550 Lumens / ft ²						
	60° Optics (60D)	12 Watts (12W) 1860 Lumens / ft ²						

Note: See page 2 for ordering notes & restrictions.


ORDERING NOTES & RESTRICTIONS

- *1 Default finish is Natural Silver (NA) if left blank.
- *2 BIOS Biological Static available in standard 3500K Daytime CCT. Consult factory for other color temperature options.
- *3 BIOS Biological Dynamic available in standard 3500K Daytime - 3000K Evening CCT gamut. Consult factory for other color temperature options.
- *4 BIOS Biological Tunable available in standard 3500K Daytime - 2700K Evening CCT gamut. Consult factory for other color temperature options.
- *5 Lumens per Foot based on 35K CCT LED. **Example:** 155 Lumens x 10 Watts = 1550 Lumens per Foot.
- *6 Remote drivers wattage sized based on length of run. **Example:** 6' run x 10 watts per foot = 60 watts. Driver will be sized to 60 watts maximum.


BEAM ANGLES




120° x 120° Beam
Clear Lens (CL)
50% Semi-Frosted Lens (SF)
100% Frosted Lens (F)




45° x 60° Beam
Asymmetric Lens
(ASM)




15° x 60° Beam
Optic Lens
(15D)



30° x 60° Beam



45° x 60° Beam




60° x 60° Beam

MINIMUM & MAXIMUM RUNS

Wattage	1.5W	2W	3W	4W	5W	6W	8W	10W	12W
0-10V & DALI Minimum Run	4'	3'	2'	2'	2'	1'	1'	1'	1'
0-10V & DALI Maximum Run	39'	27'	19'	14'	11'	9'	7'	6'	5'
DMX Minimum Run	4'	3'	2'	2'	2'	1'	1'	1'	1'
DMX Maximum Run	26'	18'	13'	9'	8'	6'	4'	4'	3'


MOUNTING OPTIONS (Sold Separately)

Note: Mounting clips are only available in Natural Silver Finish, unless otherwise specified.

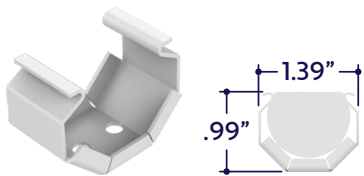


Part #	Qty.
A1-ZUCO-PVT-MC-1	

Note: Use 1 mounting clip per 2', rounded up.
Click on image to see cut sheet for additional details.

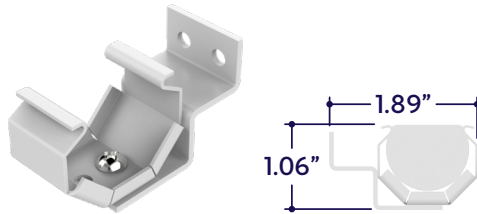


Part #	Qty.
A1-ZUCO-PVT-MC-2	

Note: Use 1 mounting clip per 2', rounded up.
Click on image to see cut sheet for additional details.

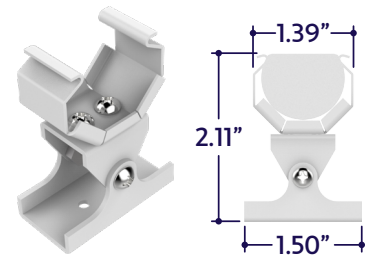

Part #	Qty.
A1-ZUCO-PVT-MC-3	

Note: Use 1 mounting clip per 2', rounded up.
Click on image to see cut sheet for additional details.

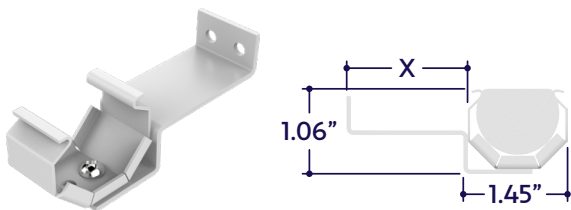

Part #	Length	Qty.
A1-ZUCO-PVT-MC-4-		

Note: Use 1 mounting clip per 2', rounded up.
Click on image to see cut sheet for additional details.




Part #	Length	Qty.
A1-ZUCO-PVT-EC-AA-		

Note: Use 2 mounting arms per luminaire up to 8'.
Click on image to see cut sheet for additional details.

DRY CONNECTORS (Sold Separately)


Note: Connectors are factory assembled to each run length.

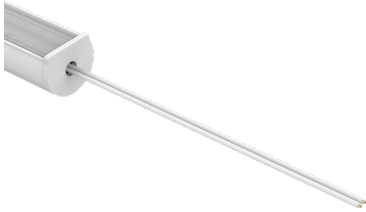

Dry Power Connector
(A1-ZUCO-PVT-BIOS-PC-DRY-X)
X = Specify Length, 36" Default, 25' Maximum

Part #	Length	Qty.
A1-ZUCO-PVT-BIOS-PC-DRY-	36"	
A1-ZUCO-PVT-BIOS-PC-DRY-		

Note: Specify 1 Power Connector for each lead required. Power Connectors are factory assembled to each length.

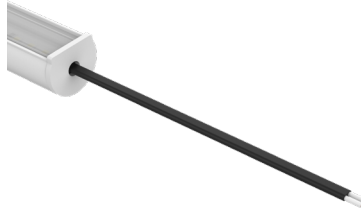

Dry Power Connector with Black Jacket
(A1-ZUCO-PVT-BIOS-PC-DRY-BK-X)
X = Specify Length, 36" Default, 25' Maximum

Part #	Length	Qty.
A1-ZUCO-PVT-BIOS-PC-DRY-BK-	36"	
A1-ZUCO-PVT-BIOS-PC-DRY-BK-		

Note: Specify 1 Power Connector for each lead required. Power Connectors are factory assembled to each length.



Dry Power Connector with White Jacket
(A1-ZUCO-PVT-BIOS-PC-DRY-WH-X)
X = Specify Length, 36" Default, 25' Maximum

Part #	Length	Qty.
A1-ZUCO-PVT-BIOS-PC-DRY-WH-	36"	
A1-ZUCO-PVT-BIOS-PC-DRY-WH-		

Note: Specify 1 Power Connector for each lead required. Power Connectors are factory assembled to each length.



Dry Continuous Connector
(A1-ZUCO-PVT-BIOS-CC-DRY-X)
X = Specify Length, 3" Default

Part #	Length	Qty.
A1-ZUCO-PVT-BIOS-CC-DRY-	3"	
A1-ZUCO-PVT-BIOS-CC-DRY-		

Note: Specify Continuous Connectors to traverse a gap or obstacle. Continuous Connectors are factory assembled to specified lengths.



Dry Continuous Connector with Black Jacket
(A1-ZUCO-PVT-BIOS-CC-DRY-BK-X)
X = Specify Length, 3" Default

Part #	Length	Qty.
A1-ZUCO-PVT-BIOS-CC-DRY-BK-	3"	
A1-ZUCO-PVT-BIOS-CC-DRY-BK-		

Note: Specify Continuous Connectors to traverse a gap or obstacle. Continuous Connectors are factory assembled to specified lengths.



Dry Continuous Connector with White Jacket
(A1-ZUCO-PVT-BIOS-CC-DRY-WH-X)
X = Specify Length, 3" Default

Part #	Length	Qty.
A1-ZUCO-PVT-BIOS-CC-DRY-WH-	3"	
A1-ZUCO-PVT-BIOS-CC-DRY-WH-		

Note: Specify Continuous Connectors to traverse a gap or obstacle. Continuous Connectors are factory assembled to specified lengths.



DELIVERED MELANOPIC RATIOS

BIOS Solution / Nominal CCT / Product Code	Spectral Mode	CRI	R9	Daytime Spectrum Melanopic Ratio* (M/P)	
				m-EER	m-DER
BIOS Biological Static: 3500K Daytime (BIOS-BS-35K)	Daytime Solution	80+	> 90	≥ 0.80	≥ 0.72
BIOS Biological Dynamic: 3500K Daytime - 3000K Evening (BIOS-BD-35K-30K)	Daytime + Evening Solution	80+	> 90	≥ 0.70	≥ 0.63
BIOS Biological Tunable: 3500K Daytime - 2700K Evening (BIOS-BT-35K-27K)	Daytime + Evening Solution	80+	> 90	≥ 0.80	≥ 0.72


*Melanopic ratios are provided in two forms: (m-EER) which is calculated using the WELL v2 methodology and the corresponding CIE melanopic Daylight Equivalent Ratio, (m-DER).

CHOOSING YOUR BIOS SOLUTION


ALUZ offers four different BIOS Circadian LED Solutions – Biological Static, Biological Dynamic, and Biological Tunable White. Use the decision tree below to identify when and where to use BIOS Wellness LED Lighting Solutions .

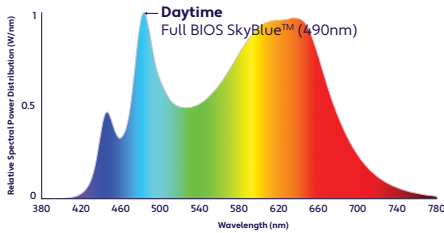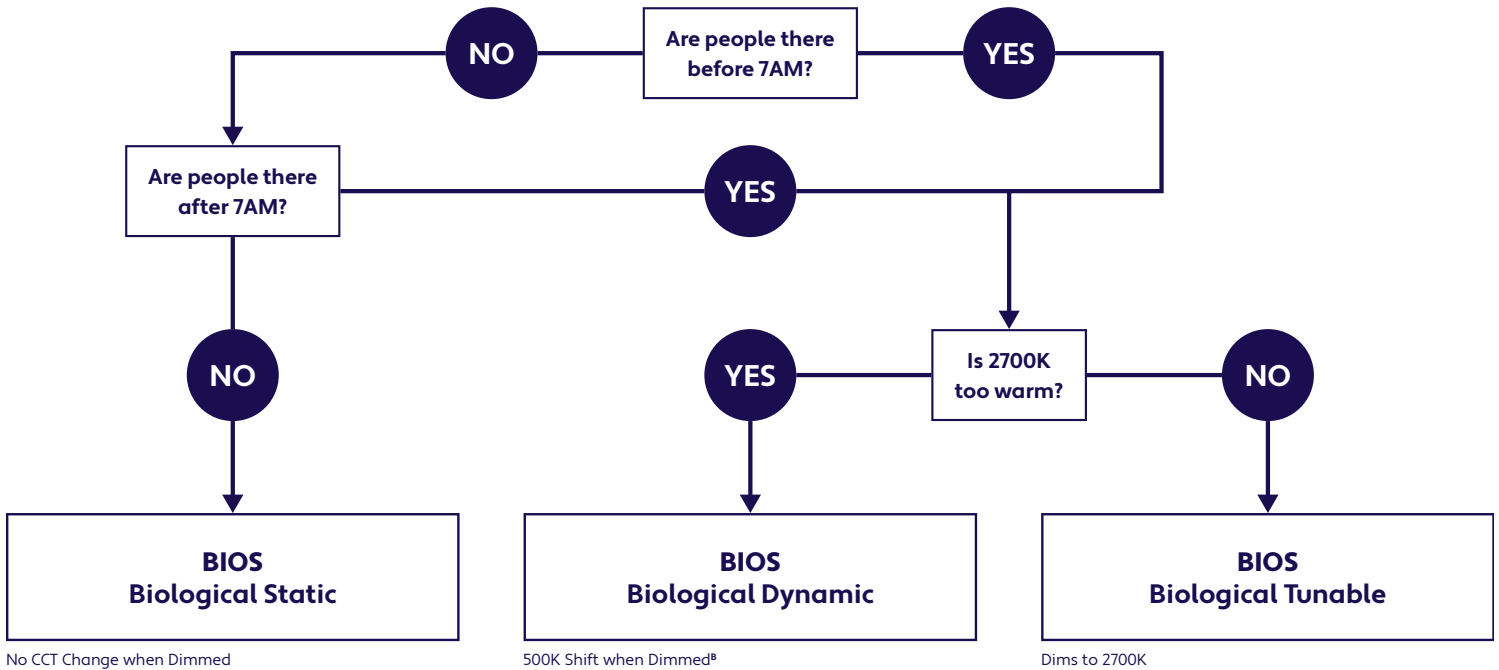

Daytime Solution
(Offices, Medical / Dental Offices)
Spaces in operation during daytime hours, between 7AM and 7PM.

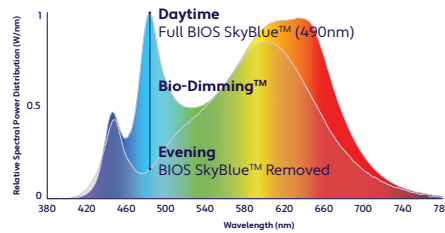


Daytime + Evening Solution
(Hospitals)
Spaces in operation overnight, after 7PM and before 7AM.
CCT color shift in the evening not preferred.
(^B3000K dims to 2700K)

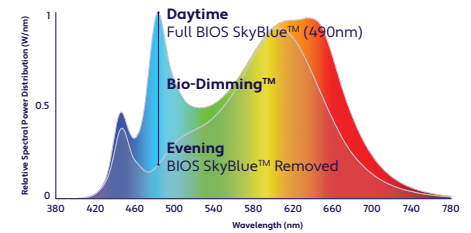


Daytime + Evening Solution
(Offices, Shiftwork)
Spaces in operation overnight, after 7PM and before 7AM and people do not sleep there.
CCT color shift in the evening not preferred.

DESIGN GUIDELINES


Individual Fixture



Continuous Run (Dry Location)

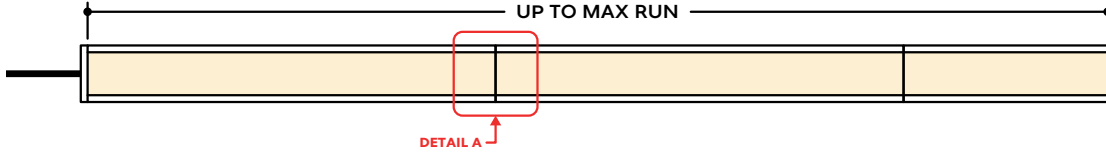

Runs with Continuous Connector (Dry Location)

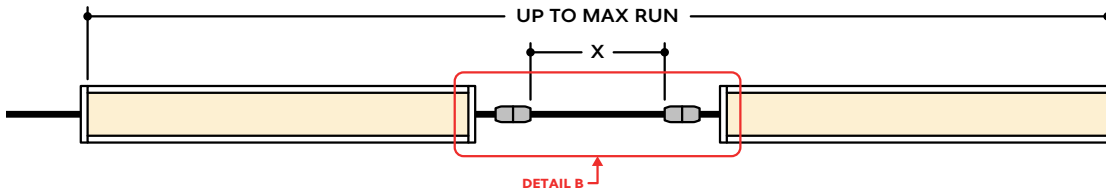


KEY

- Detail A** **Continuous Connection (Dry Location):** Luminaire segments connect using pins, leaving no gaps between segments, with a mounting clip holding the two segments together. Refer to installation instructions for additional information.
- Detail B** **Dry Continuous Connector:** Used to span a corner or traverse a gap, corner, or obstacle in a dry location installation area.

Note: Drawings not to scale. Product may differ from examples shown.

CONNECTION SEQUENCE

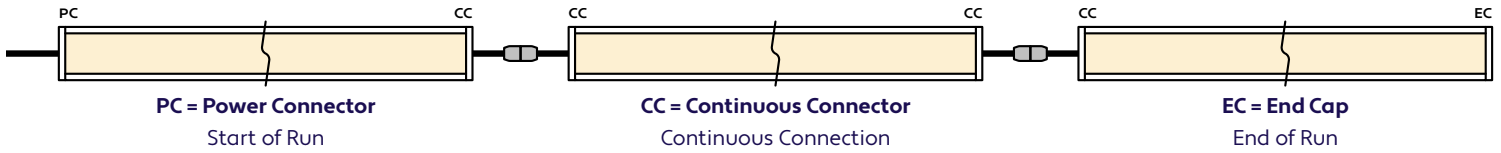


- Specifying a layout is not required to place an order.
- Configuration code applies to full length ordered and will be built per the Continuous Run models on Design Guidelines.
- Connector type subject to change based on availability and listing. Refer to Design Guidelines for details.

HOW TO SPECIFY CONFIGURATIONS


Example: 20' Straight Run

- 1x A1-ZUCO-PVT-BIOS-CL-NA-BS-35K-10W-10V-DRY-UNV-9'-PC-EC




Example: 25' L-Shaped Run

- 1x A1-ZUCO-PVT-BIOS-CL-NA-BS-35K-10W-10V-DRY-UNV-6'-PC-CC
- 1x A1-ZUCO-PVT-BIOS-CL-NA-BS-35K-10W-10V-DRY-UNV-7'-CC-EC

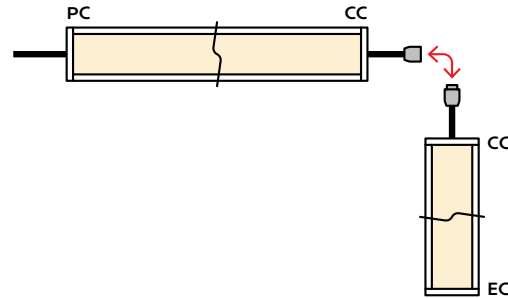

Example: 30' U-Shaped Run

- 1x A1-ZUCO-PVT-BIOS-CL-NA-BS-35K-10W-10V-DRY-UNV-6'-PC-CC
- 1x A1-ZUCO-PVT-BIOS-CL-NA-BS-35K-10W-10V-DRY-UNV-9'-CC-CC
- 1x A1-ZUCO-PVT-BIOS-CL-NA-BS-35K-10W-10V-DRY-UNV-6'-CC-EC

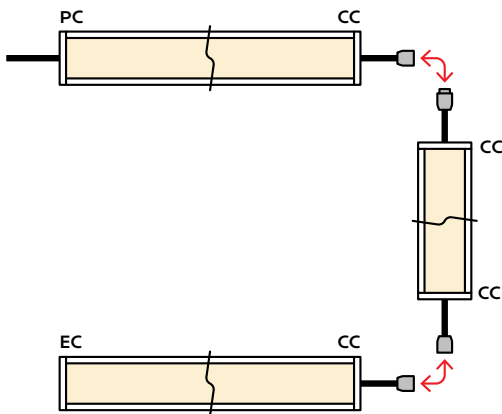

Example: 28' Rectangle Shaped Run

- 1x A1-ZUCO-PVT-BIOS-CL-NA-BS-35K-10W-10V-DRY-UNV-5'-PC-CC
- 1x A1-ZUCO-PVT-BIOS-CL-NA-BS-35K-10W-10V-DRY-UNV-3'-CC-CC
- 1x A1-ZUCO-PVT-BIOS-CL-NA-BS-35K-10W-10V-DRY-UNV-5'-CC-CC
- 1x A1-ZUCO-PVT-BIOS-CL-NA-BS-35K-10W-10V-DRY-UNV-3'-CC-EC

